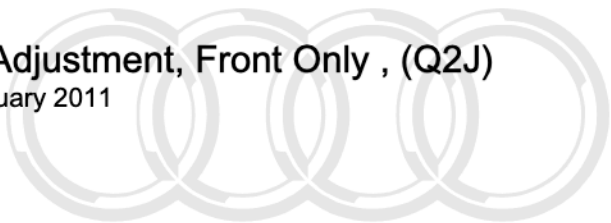


Seats Adjustment, Front Only , (Q2J)

From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

Memory Seat/Steering Column Adjustment Control Module,
Driver Power Seat Adjustment Circuit Breaker 1

- J136 Memory Seat/Steering Column Adjustment Control Module
S44 Driver Power Seat Adjustment Circuit Breaker 1
S133 Safety Fuse 3
T12x 12-Pin Connector
T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
T32m 32-Pin Connector

- 34 Ground Connection Under Driver Seat
95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
371 Ground Connection 6 (in Main Wiring Harness)
B316 Positive Connection 2 (30a) (in Main Wiring Harness)
M27 Comfort System CAN Bus High Connection (in Driver Seat Adjustment Wiring Harness)
M28 Comfort System CAN Bus Low Connection (in Driver Seat Adjustment Wiring Harness)
* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Comfort CAN Bus

Protected by copyright. Copying for private or corporate use without the prior written permission of Audi AG is prohibited. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

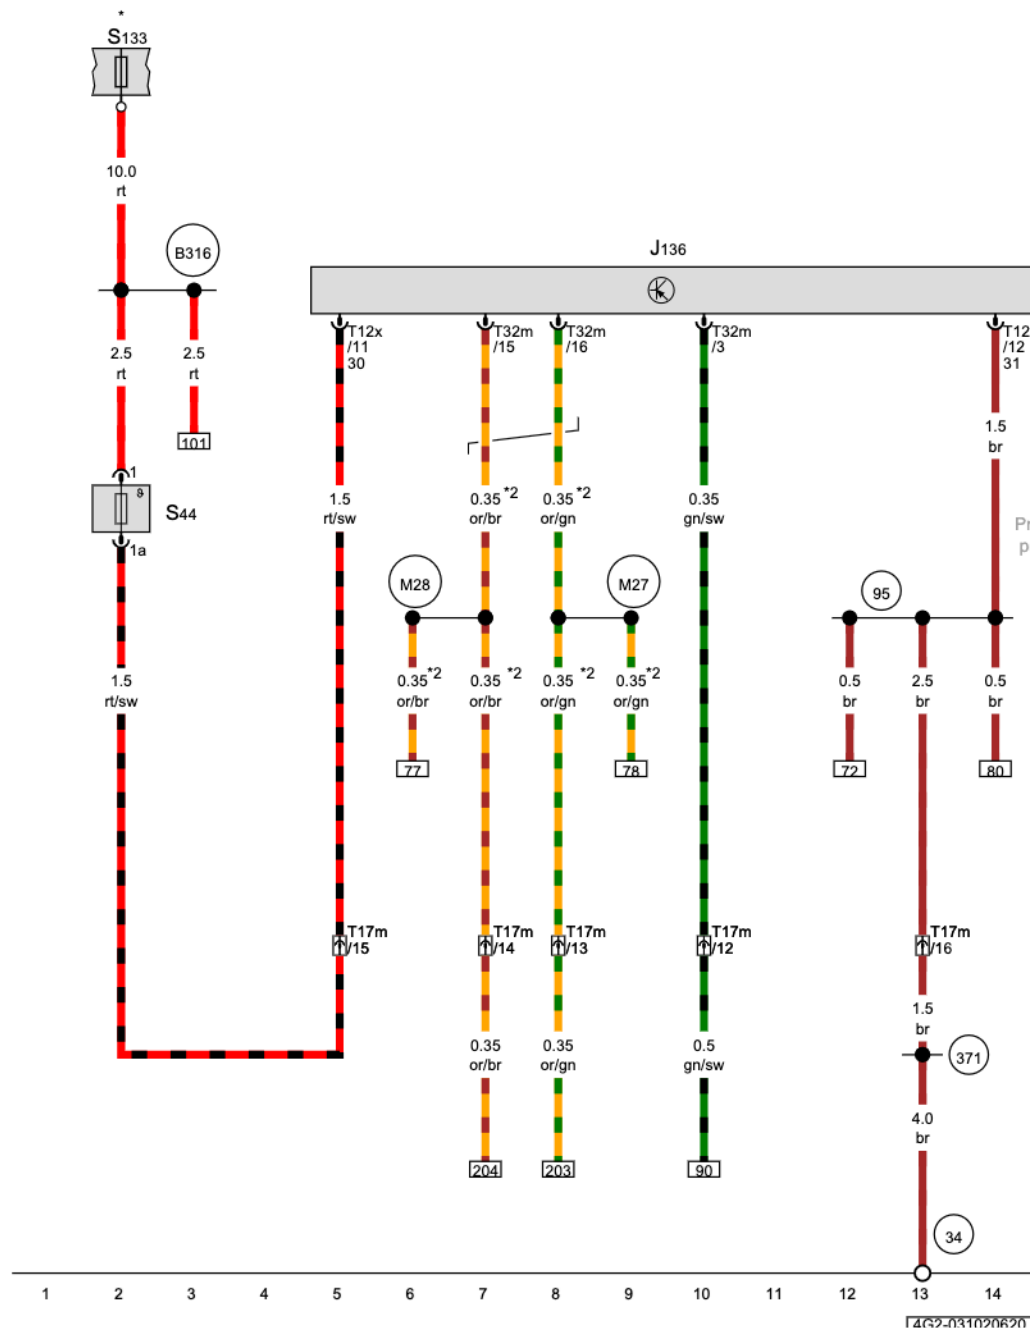


- ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Driver Seat Switch Module 2, Driver Side Massage Function Button, Memory Seat/Steering Column Adjustment Control Module

- E418 Seat Forward/Back Adjustment Button
- E424 Seat Height Adjustment Button
- E425 Backrest Adjustment Button
- E667 Driver Seat Switch Module 2
- E670 Driver Side Massage Function Button
- J136 Memory Seat/Steering Column Adjustment Control Module
- T2kc 2-Pin Connector, In the Driver Seat
- T4cf 4-Pin Connector
- T32m 32-Pin Connector


413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

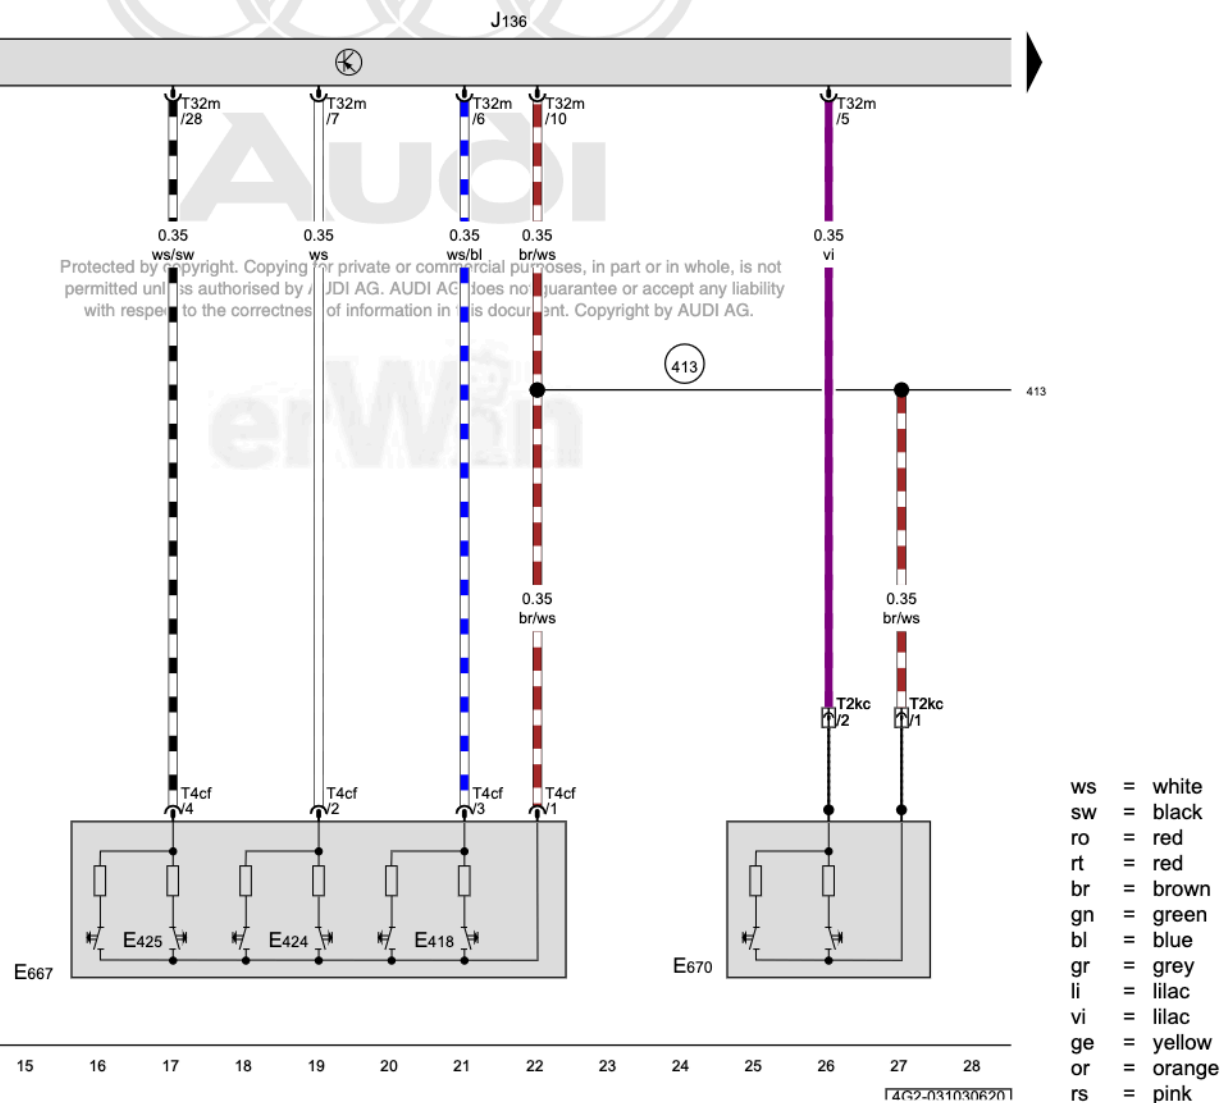

Driver Seat Switch Module, Memory Seat/Steering Column Adjustment Control Module


- E96 Driver Backrest Adjustment Switch
- E222 Driver Seat Angle Adjustment Switch
- E363 Driver Seat Forward/Back Adjustment Switch
- E364 Driver Seat Height Adjustment Switch
- E663 Driver Seat Switch Module
- J136 Memory Seat/Steering Column Adjustment Control Module
- T12z 12-Pin Connector
- T32m 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

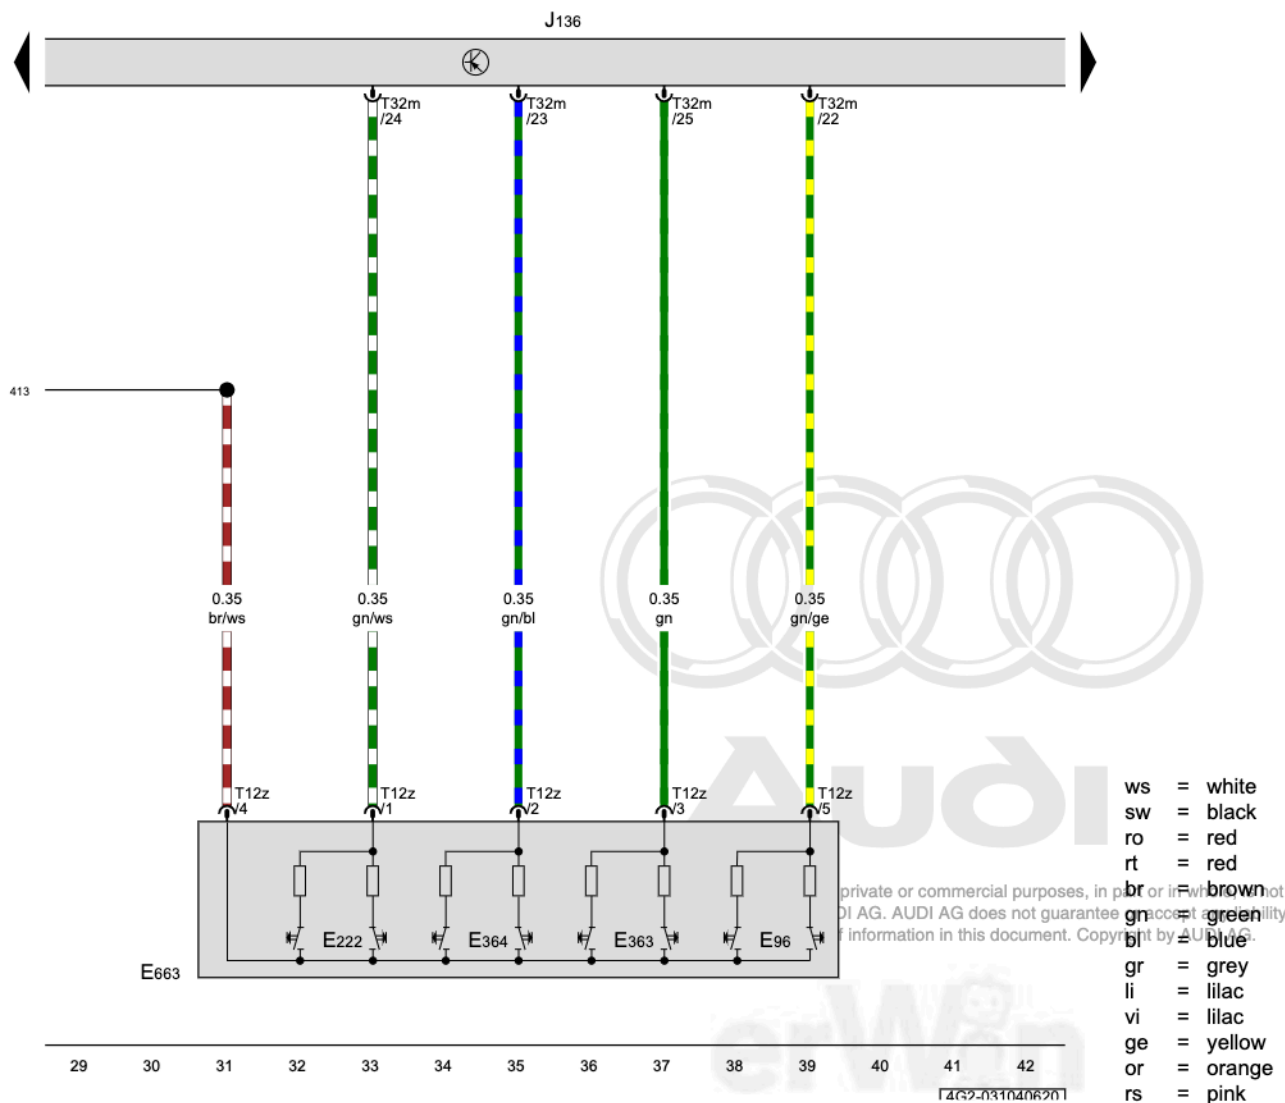


Memory Seat/Steering Column Adjustment Control Module,
Driver Seat Height Adjustment Motor

- J136 Memory Seat/Steering Column Adjustment Control Module
- T4cg 4-Pin Connector
- T4ci 4-Pin Connector
- T4ck 4-Pin Connector
- T12x 12-Pin Connector
- V243 Driver Seat Angle Adjustment Motor
- V245 Driver Seat Height Adjustment Motor
- V256 Driver Seat Depth Adjustment Motor
- * For RHD Vehicles

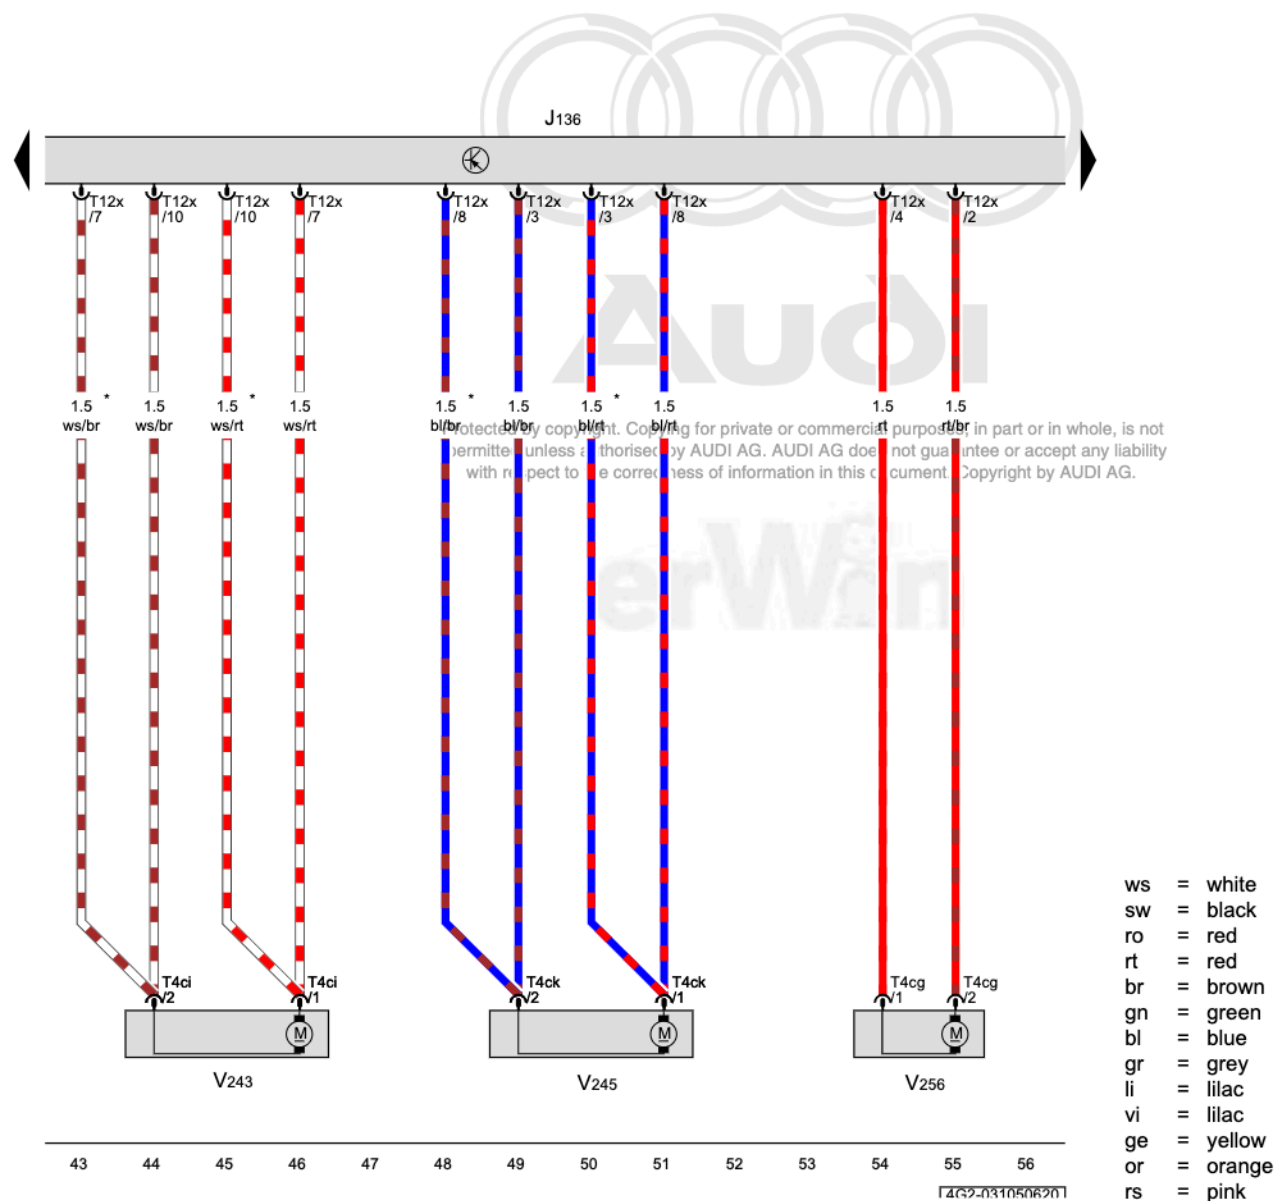

Memory Seat/Steering Column Adjustment Control Module,
Driver Seat Forward/Back Adjustment Motor, Driver
Backrest Adjustment Motor

- J136 Memory Seat/Steering Column Adjustment Control Module
- T4ce 4-Pin Connector
- T4cl 4-Pin Connector
- T12x 12-Pin Connector
- T12y 12-Pin Connector, In the Driver Seat
- V28 Driver Seat Forward/Back Adjustment Motor
- V45 Driver Backrest Adjustment Motor
- * For RHD Vehicles

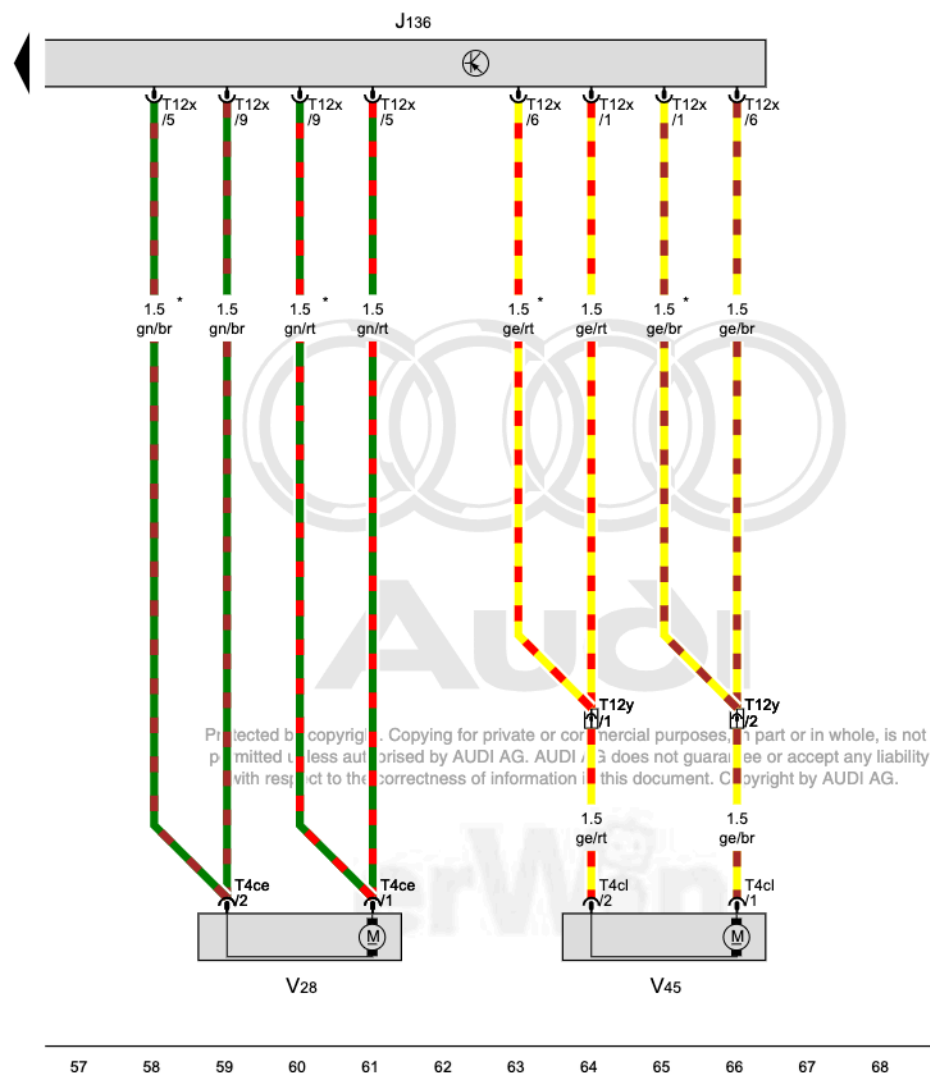

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink




E338	Memory Seat Positions 1 and 2 Button
J873	Driver Multi-Contour Seat Control Module
N475	Valve Block 1 in Driver Seat
N476	Valve Block 2 in Driver Seat
ST2	Fuse Panel 2
SB5	Fuse 5 (On Fuse Panel B)
T4ch	4-Pin Connector
T6az	6-Pin Connector, In the Driver Seat
T12y	12-Pin Connector, In the Driver Seat
T17m	17-Pin Connector, In the Coupling Point for the Left Front Seat
V439	Driver Multi-Contour Seat Compressor
*	Refer to Applicable Wiring Diagram for Fuse Positions
*2	Comfort CAN Bus

Driver Memory Seat Control Head, Emergency Off Button,
Driver Door Control Module

- E97 Driver Memory Seat Control Head
- E190 Emergency Off Button
- E218 Memory Seat Position 1 Button
- E219 Memory Seat Position 2 Button
- E283 Driver Seat Memory Button
- J386 Driver Door Control Module
- T10o 10-Pin Connector
- T20e 20-Pin Connector
- T27a 27-Pin Connector, On the Left A-Pillar
- T32k 32-Pin Connector

- 267 Ground Connection 2 (in Driver Door Wiring Harness)
- R52 Connection 58S (in Driver Door Wiring Harness)

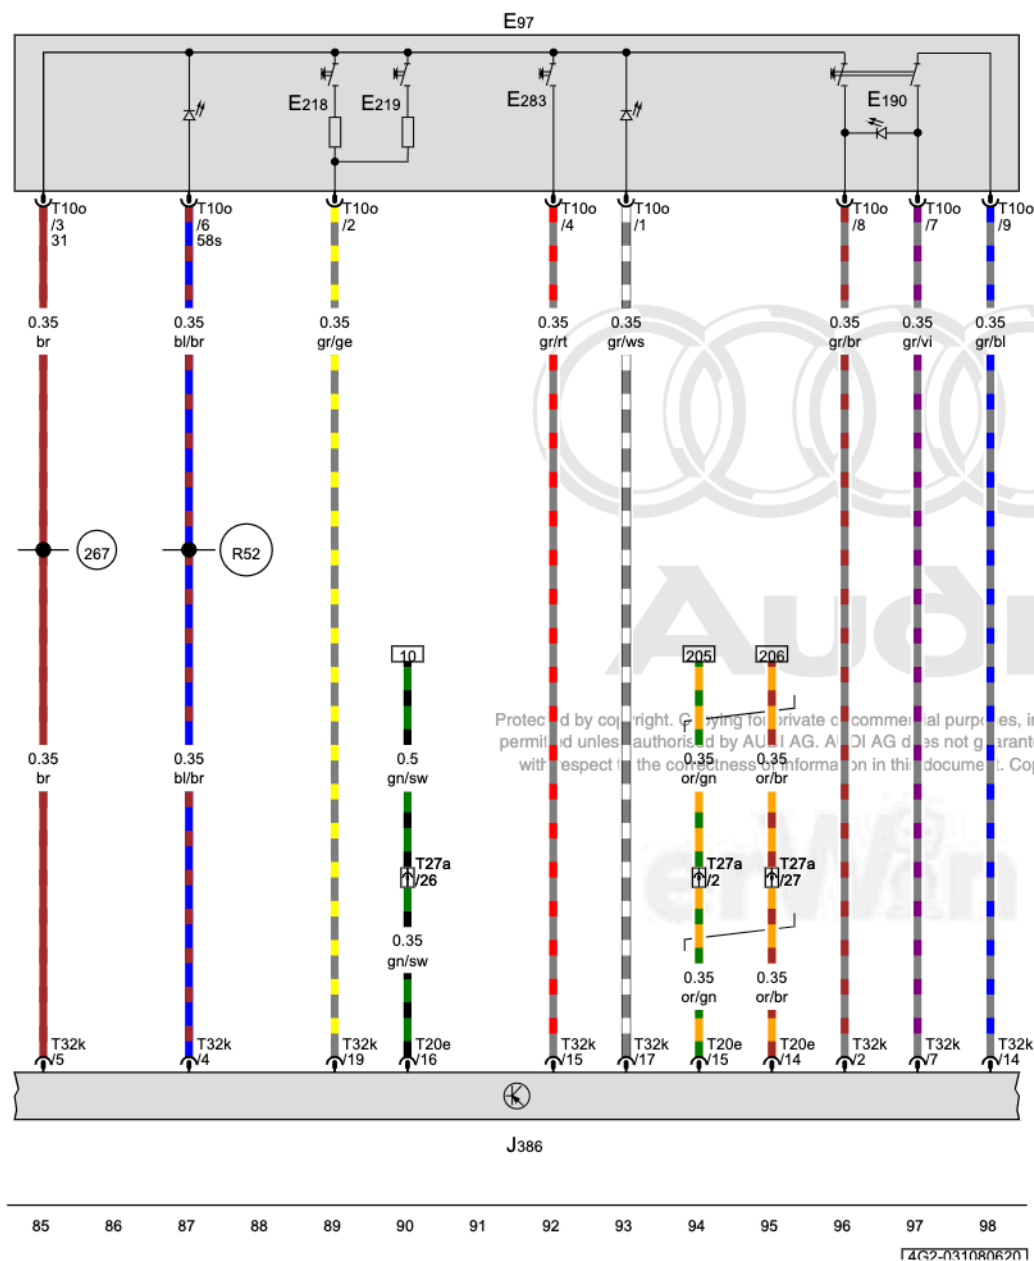


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Memory Seat Control Module, Front Passenger Power Seat Adjustment Circuit Breaker 1

- J521 Front Passenger Memory Seat Control Module
- S46 Front Passenger Power Seat Adjustment Circuit Breaker 1
- S131 Safety Fuse 1
- T12aa 12-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T32n 32-Pin Connector

- 35 Ground Connection Under Front Passenger Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- M97 Comfort System CAN Bus High Connection (in Front Passenger Seat Adjustment Wiring Harness)
- M98 Comfort System CAN Bus Low Connection (in Front Passenger Seat Adjustment Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Comfort CAN Bus
- *3 From June 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

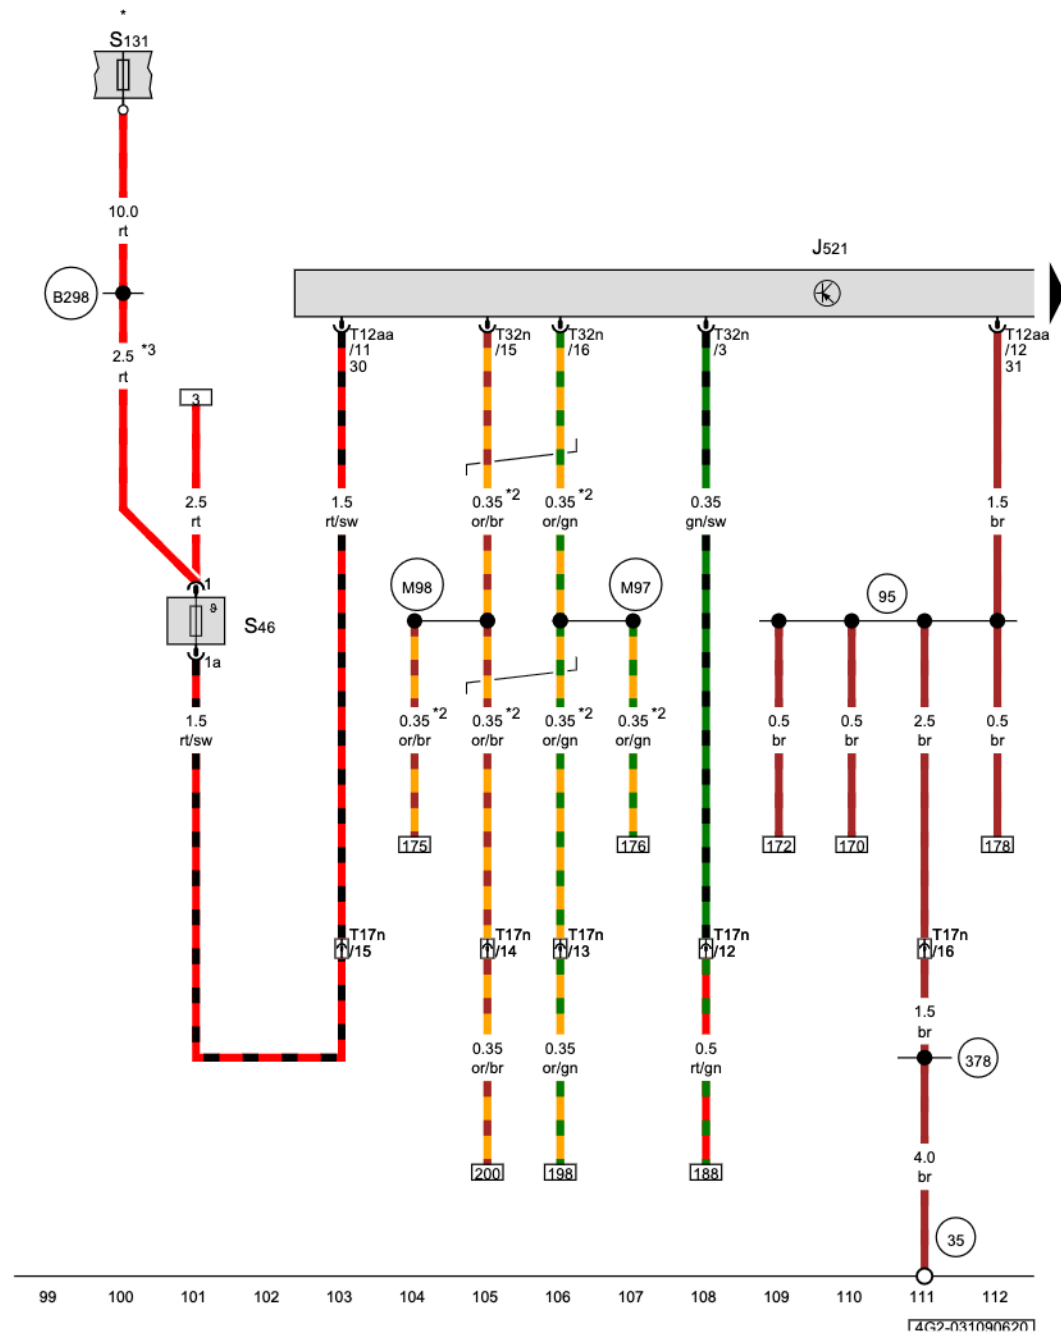


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Seat Switch Module 2, Front Passenger Massage Function Button, Front Passenger Memory Seat Control Module

- E418 Seat Forward/Back Adjustment Button
- E424 Seat Height Adjustment Button
- E425 Backrest Adjustment Button
- E668 Front Passenger Seat Switch Module 2
- E671 Front Passenger Massage Function Button
- J521 Front Passenger Memory Seat Control Module
- T2ko 2-Pin Connector
- T4ed 4-Pin Connector
- T32n 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

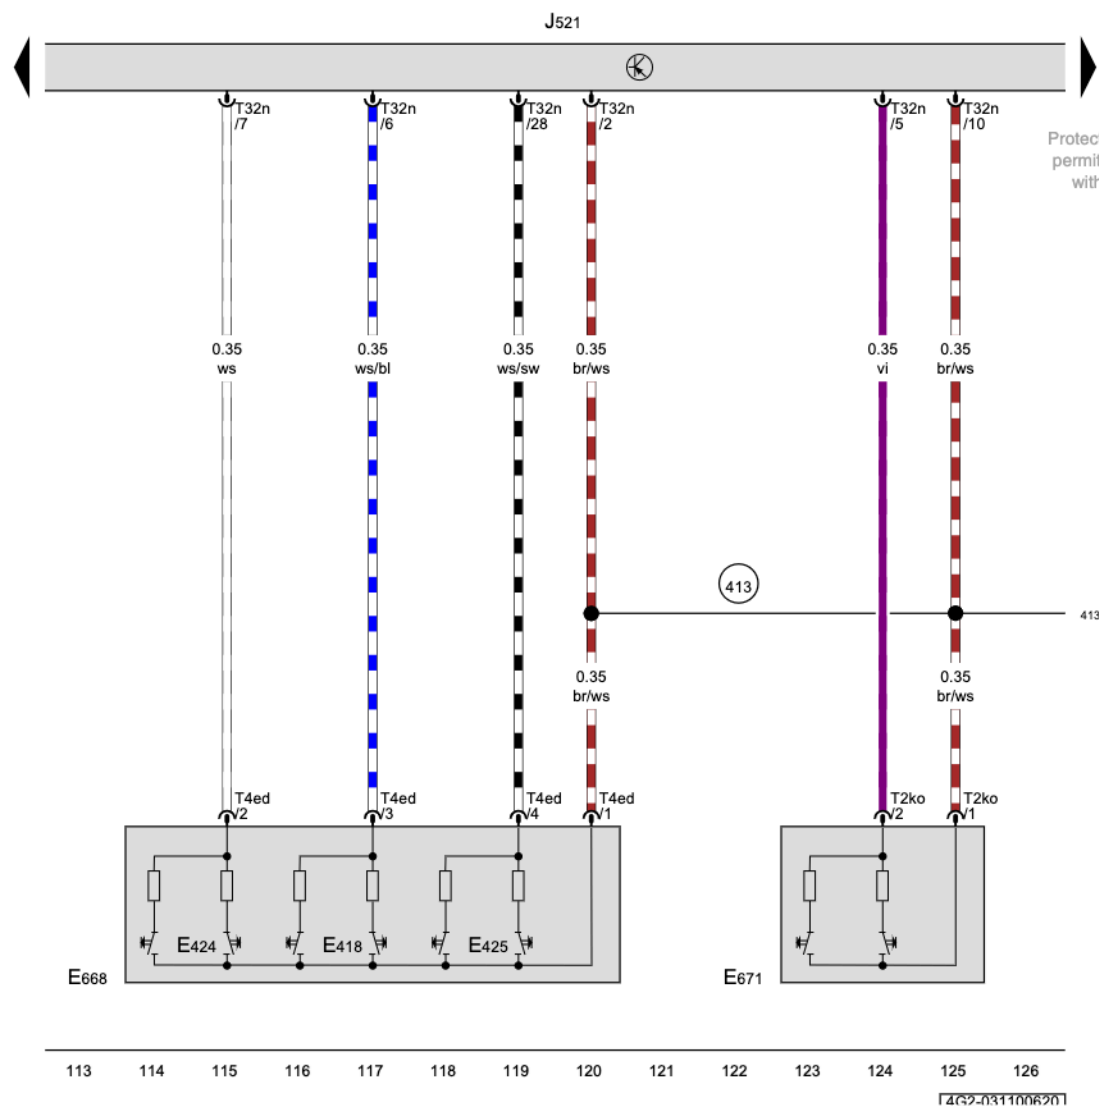


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Seat Switch Module, Front Passenger Memory Seat Control Module

- E64 Front Passenger Seat Forward/Back Adjustment Switch
- E98 Front Passenger Backrest Adjustment Switch
- E334 Front Passenger Seat Angle Adjustment Button
- E365 Front Passenger Seat Height Adjustment Switch
- E664 Front Passenger Seat Switch Module
- J521 Front Passenger Memory Seat Control Module
- T12ac 12-Pin Connector
- T32n 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

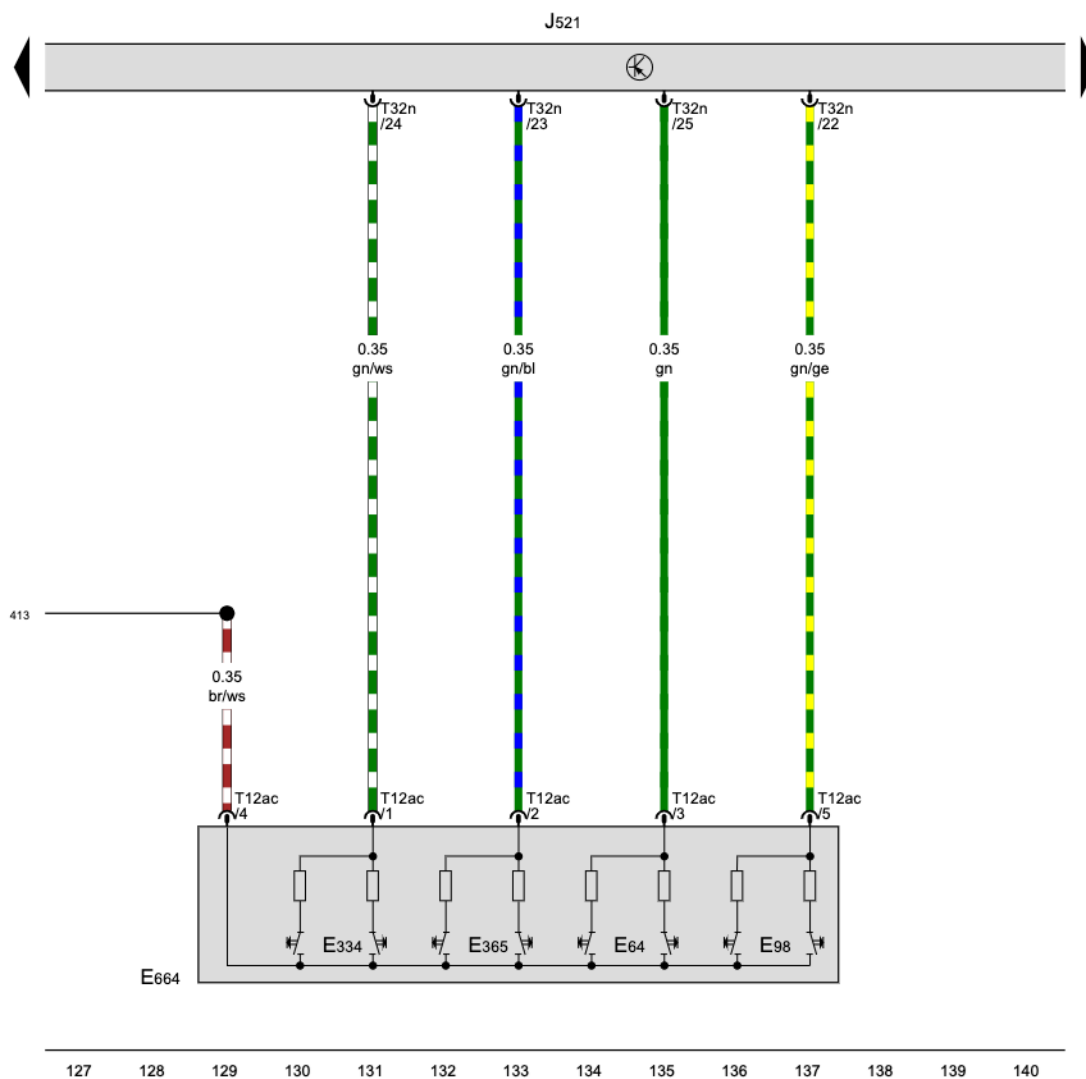


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Memory Seat Control Module, Front Passenger Seat Angle Adjustment Motor, Front Passenger Seat Height Adjustment Motor


- J521 Front Passenger Memory Seat Control Module
- T4cn 4-Pin Connector
- T4co 4-Pin Connector
- T4cp 4-Pin Connector
- T12aa 12-Pin Connector
- V244 Front Passenger Seat Angle Adjustment Motor
- V246 Front Passenger Seat Height Adjustment Motor
- V257 Front Passenger Seat Depth Adjustment Motor
- * Comfort CAN Bus
- *2 For RHD Vehicles

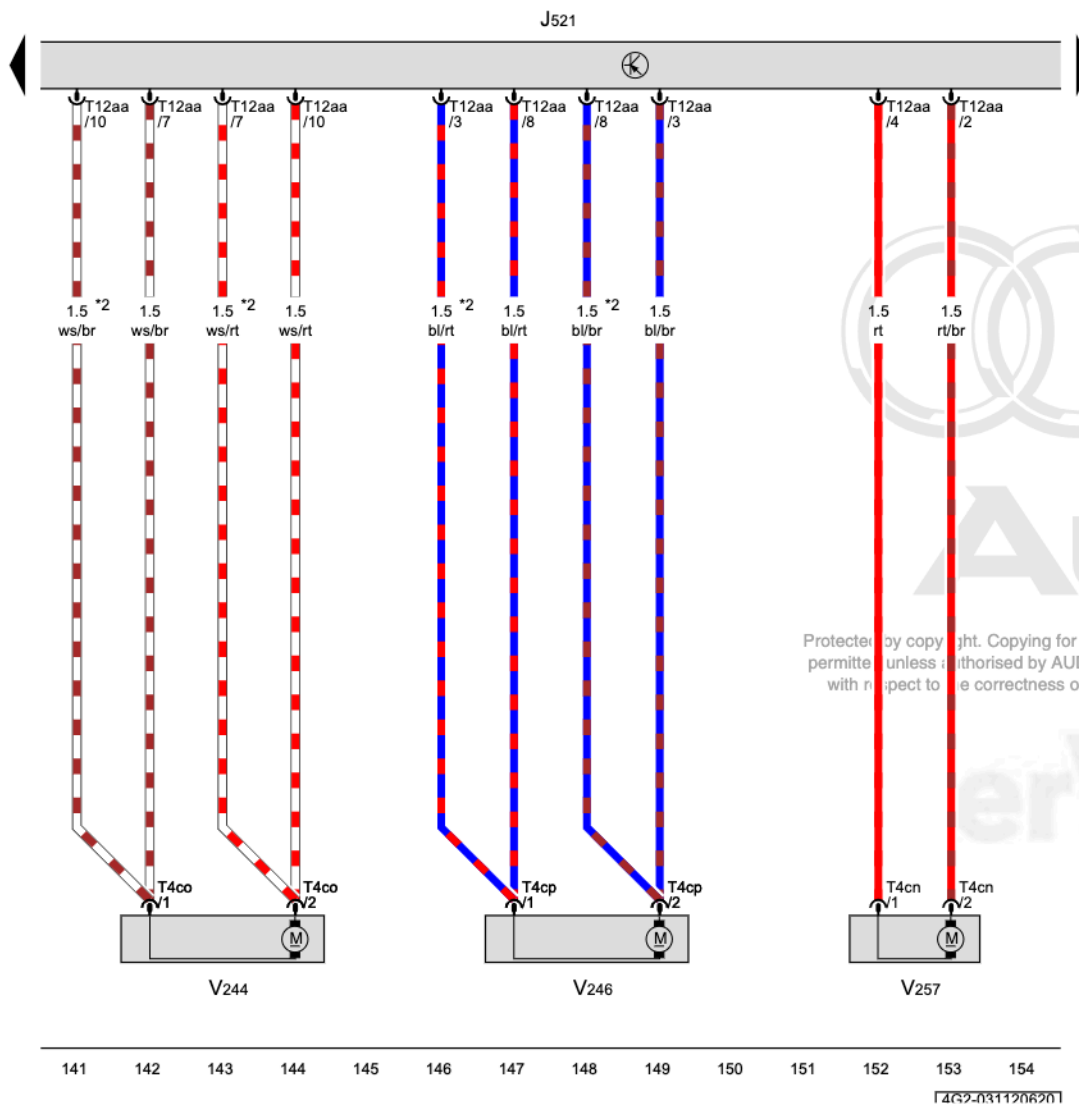

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Front Passenger Memory Seat Control Module, Front Passenger Seat Forward/Back Adjustment Motor, Front Passenger Backrest Adjustment Motor

- J521 Front Passenger Memory Seat Control Module
- T4cm 4-Pin Connector
- T4eg 4-Pin Connector
- T12aa 12-Pin Connector
- T12ab 12-Pin Connector, In the Front Passenger Seat
- V31 Front Passenger Seat Forward/Back Adjustment Motor
- V46 Front Passenger Backrest Adjustment Motor
- * For RHD Vehicles

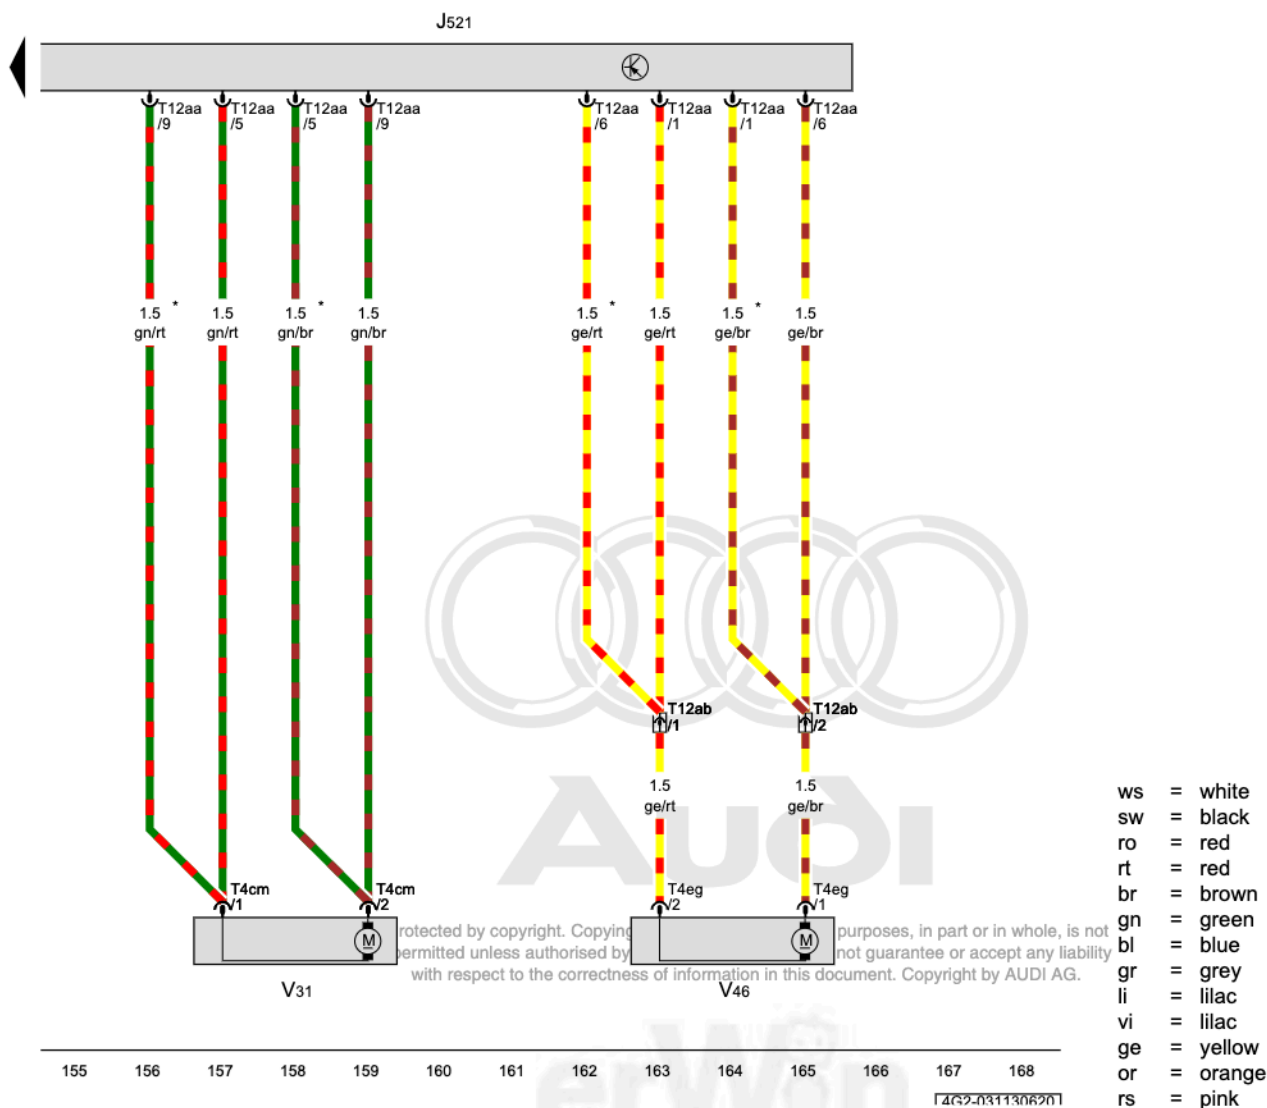

Front Passenger Multi-Contour Seat Control Module, Valve Block 1 in Front Passenger Seat, Valve Block 2 in Front Passenger Seat, Driver Multi-Contour Seat Compressor

- J872 Front Passenger Multi-Contour Seat Control Module
- N477 Valve Block 1 in Front Passenger Seat
- N478 Valve Block 2 in Front Passenger Seat
- ST3 Fuse Panel 3
- SB6 Fuse 6 (On Fuse Panel B)
- T4ef 4-Pin Connector
- T6ba 6-Pin Connector, In the Front Passenger Seat
- T12ab 12-Pin Connector, In the Front Passenger Seat Backrest
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- V439 Driver Multi-Contour Seat Compressor
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Comfort CAN Bus

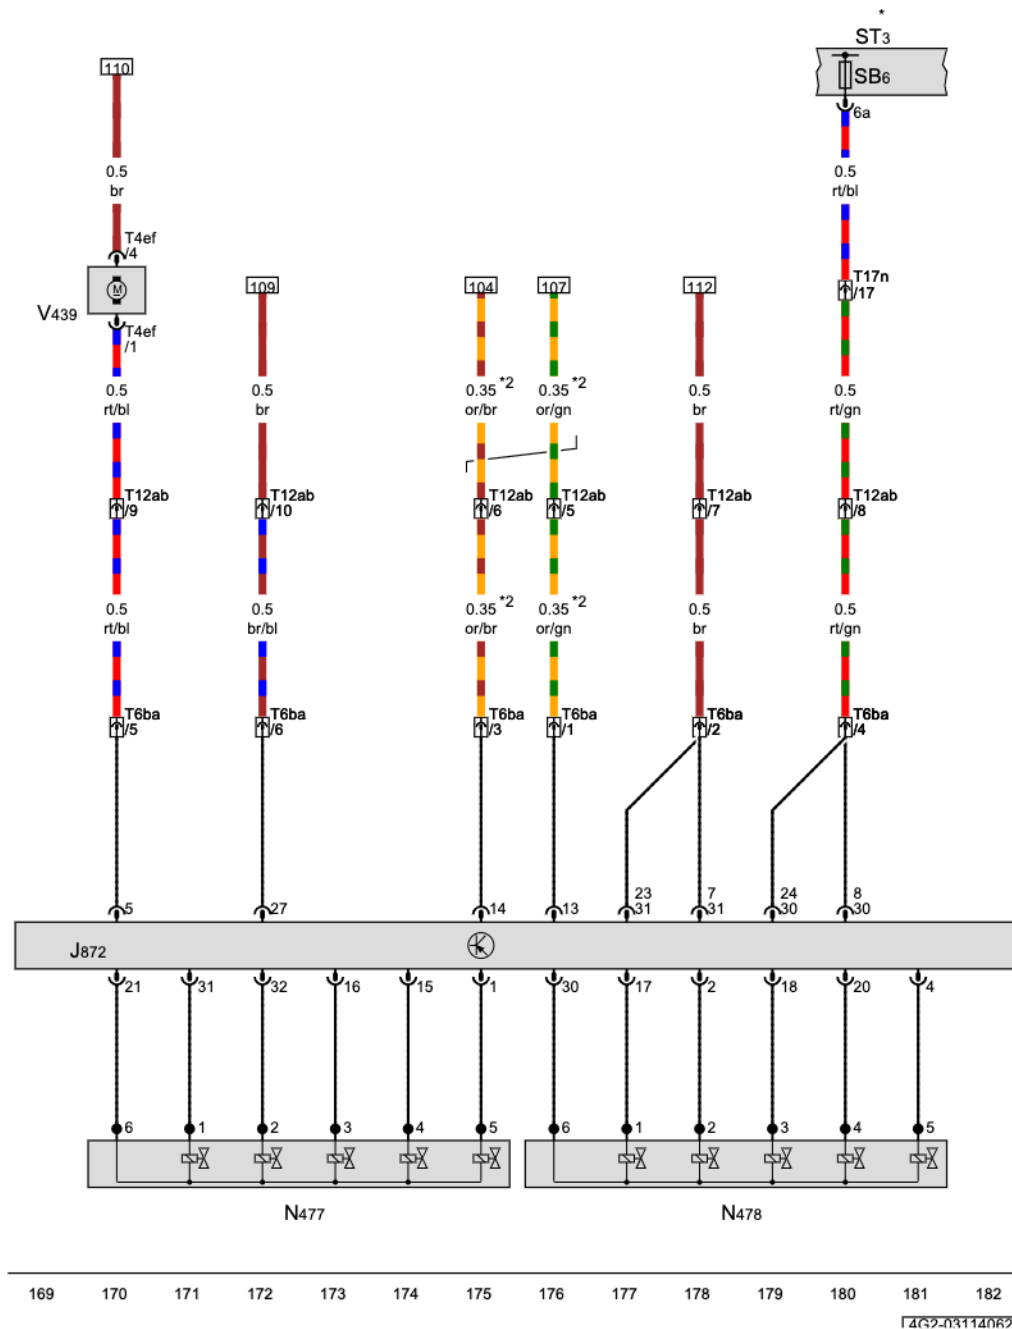

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink



Audi


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Front Passenger Memory Seat Control Head, Passenger Side Emergency -Off- Button, Front Passenger Door Control Module


- E277 Front Passenger Memory Seat Control Head
- E338 Memory Seat Positions 1 and 2 Button
- E340 Front Passenger Memory Seat Button
- E466 Passenger Side Emergency -Off- Button
- J387 Front Passenger Door Control Module
- T10r 10-Pin Connector
- T20f 20-Pin Connector
- T27b 27-Pin Connector, On the Right A-Pillar
- T32l 32-Pin Connector

- 268 Ground Connection 2 (in Front Passenger Door Wiring Harness)
- R53 Connection 58S (in Front Passenger Door Wiring Harness)
- * Comfort CAN Bus

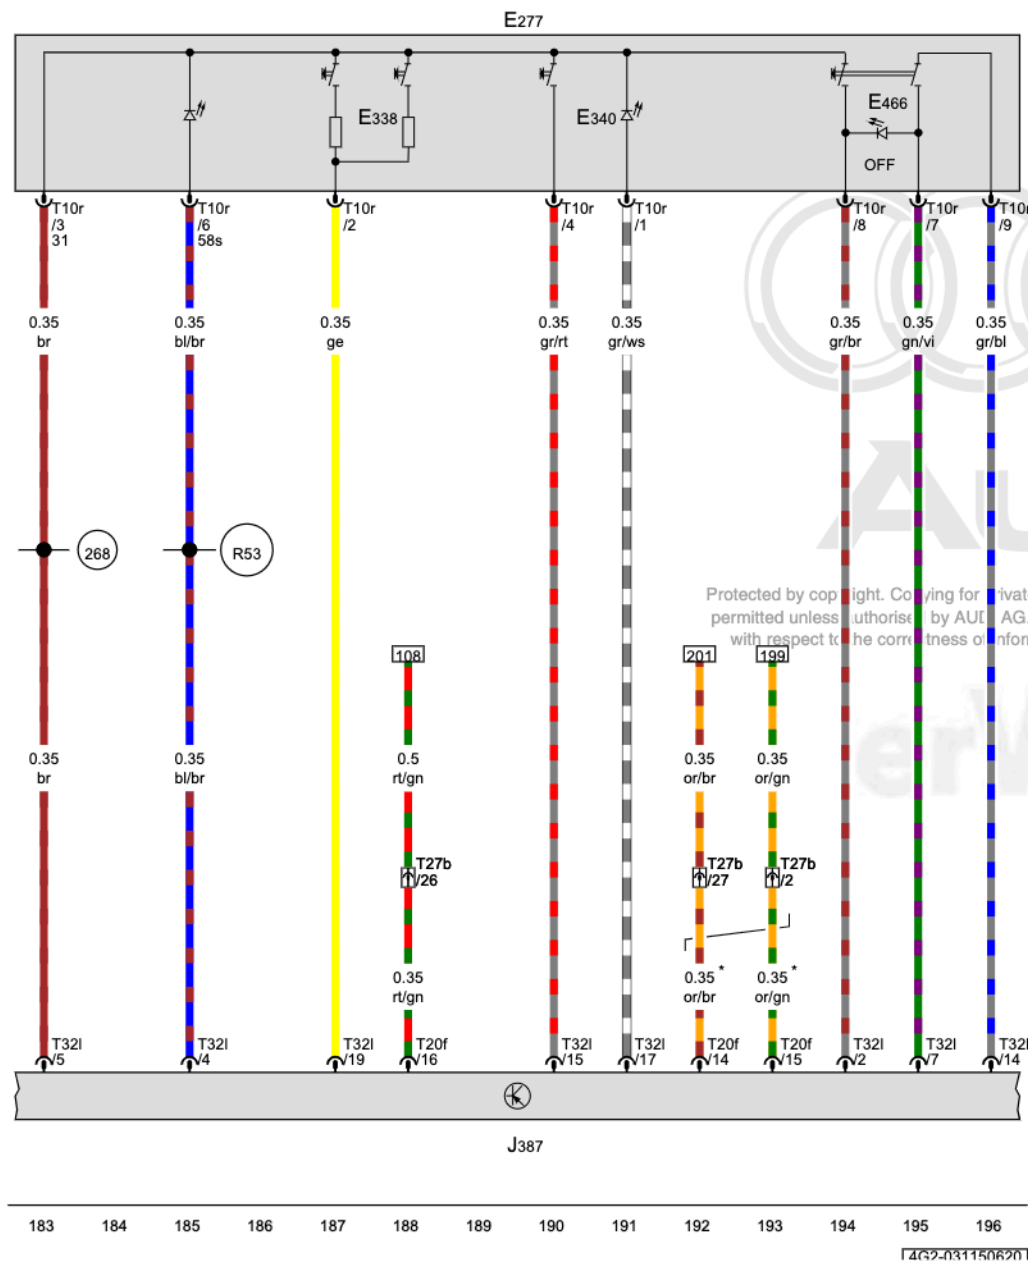

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

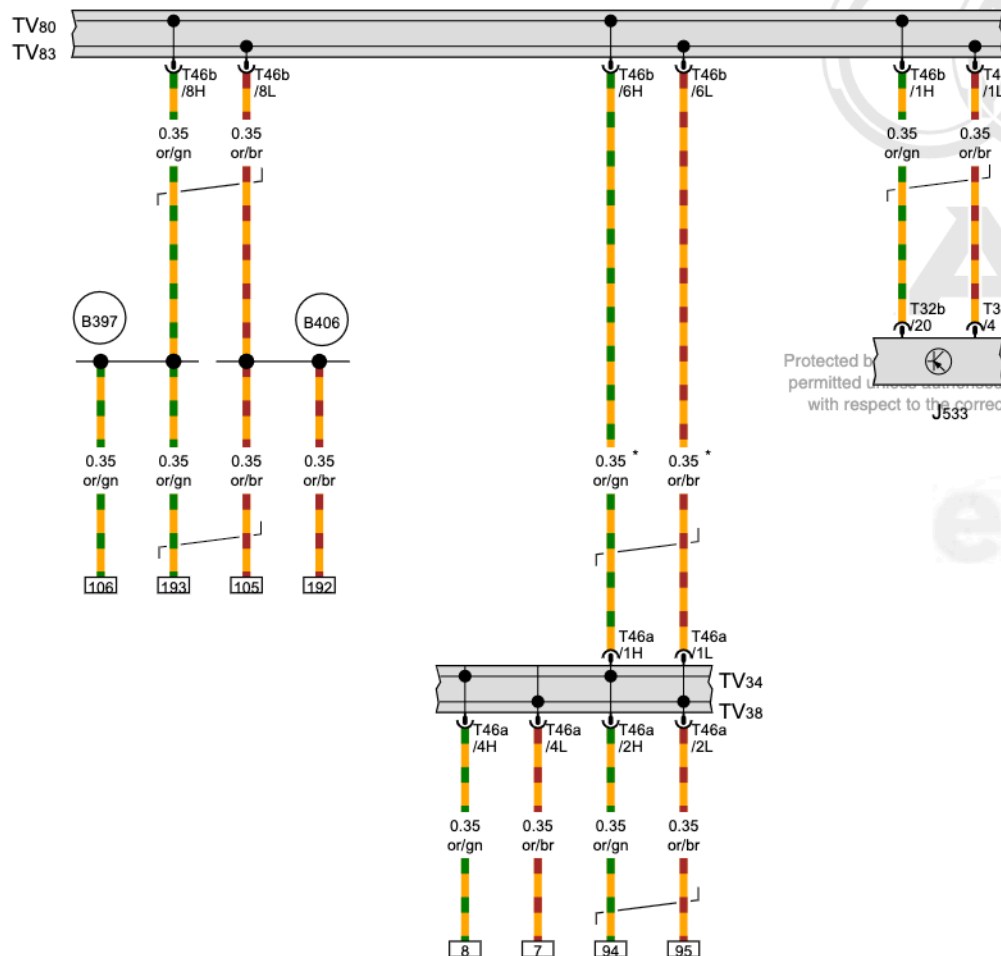

Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Wire Junction, Comfort System CAN Bus
Low Wire Junction, Comfort System CAN Bus Low Wire
Junction 2

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- B397 Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)

B406 Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)

* Data Bus Wire (CAN Bus)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink